

Additional Functions in E-300 Firmware Version 1.3

BUTTON TIMER

It is now possible to set the interval between pressing a button and when the control dial can be operated.



[OFF / 3 SEC / 5 SEC] can be selected, OFF means no time limited, the default is 3 sec.



How to set

In the menu, setup2→BUTTON TIMER→「OFF / 3sec / 5sec」, select one option and press the OK button.



(Underwater macro and Underwater wide)


Allocate  (Sport mode) and  (Night scene mode) on mode dial to

 (Underwater macro mode) and  (Underwater wide mode), the default is OFF.


How to set

In the menu, setup2→  → 「OFF/ON」, select one and Press the OK button.

About Underwater macro mode & Underwater wide mode

 (Underwater macro) : Suitable for shooting close-ups of fish. The natural

Color of the water will appear. If you use the flash, you can enhance the red tones.

 (Underwater wide) : Suitable for shooting a wide area such as a school of fish.

Lets you take pictures with a rich, more vivid blue background.

* When taking pictures, the optional underwater housing must be attached.

How to confirm shooting mode

The icon of shooting mode will be displayed on the upper left corner in control panel screen.

